

## Tempo Communications Splice on Connector Assembly Instructions


1. Place rubber and then the splice protector onto the field fiber.



2. Cleave the field and splice on connector fibers and load into the fusion splicer.



3. Complete fusion splice
4. Place the splice protector over the fusion splice being sure to center the splice protector over the fusion splice.
5. Shrink the splice protector and allow to cool in the cooling tray.

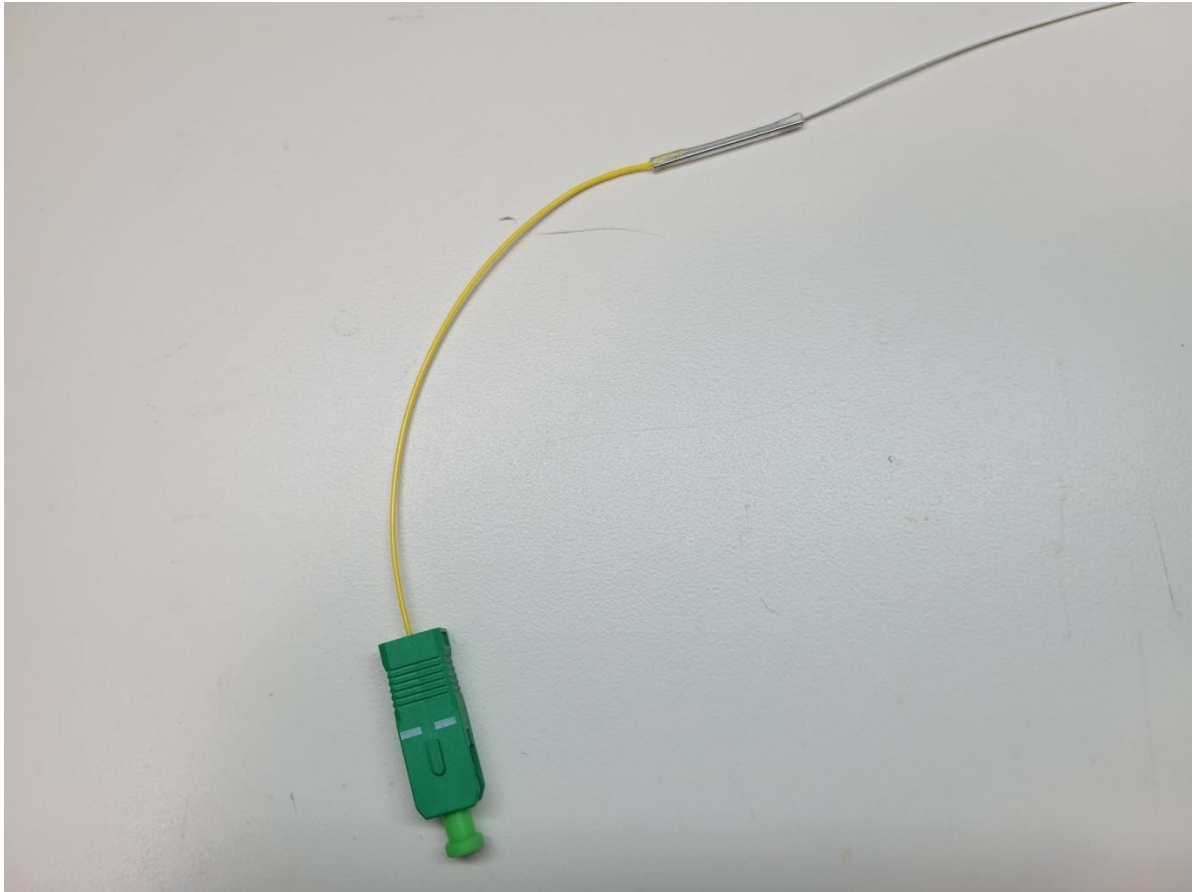

6. Place the strain relief boot onto the splice on connector.

